

**RKM** - regulation damper

**RKTM** - tight regulation damper

in design variants intended for use in  
potentially explosive atmospheres

Instructions for use



## CONTENT

I. GENERAL.....	3
Conditions of use.....	4
II. DESIGN.....	5
III. TECHNICAL DATA.....	8
Actuator torques.....	8
Assignment and setting of actuators SCHISCHEK ExMax-... and RedMax.....	9
IV. MATERIALS, SURFACE TREATMENT.....	12
V. QUALITY INSPECTION, TESTING BY THE MANUFACTU.....	12
VI. INSTALLATION, COMMISSIONING, OPERATION, MAINTENANCE, OPERATIONAL CHECKS.....	13
VII. DAMPER IDENTIFICATION.....	14

## I. GENERAL

Those Instructions for use are valid for damper types RKM and RKTМ **in design variants intended for use in in potentially explosive atmospheres** (named hereinafter also shortly as the “dampers”) according to ATEX directive 2014/34/EU and they complement the Technical specifications TPM 009/00, and TPM 012/00, respectively.

This means that the mentioned Technical Specifications are valid for these dampers, subject to the proviso that in the event of any conflict with this document, this document shall apply.

The document applies to both dampers without an actuator and dampers with an actuator (damper and actuator assemblies), when

- the dampers themselves are designed, classified, certified, manufactured and marked according to EN IEC 60079-0:2018 and EN ISO 80079-36:2016 standards by the manufacturer MANDÍK,
- any actuator is designed, classified, certified, manufactured and marked according to EN IEC 60079-0:2018, EN IEC 60079-1:2014, EN IEC 60079-11:2012, EN IEC 60079-11:2014 standards by the manufacturer SCHISCHEK and the resulting damper and actuator assembly is designed, classified, manufactured and marked by the manufacturer MANDÍK in accordance with the ATEX directive 2014/34/EU.

Use the manufacturer's documentation to connect the actuator.

## Conditions of use

### The dampers may be used under the following conditions

- a) the dampers installed, commissioned, operated and maintained in accordance with those Instructions for use and in the case of dampers with an actuator also according to the operating instructions of the actuator manufacturer and
- b) the damper orientation with blades either in horizontal, or vertical position and
- c) mean air velocity in the duct of 12 m/s and the duct overpressure or underpressure of max. 1500 Pa, and
- d) damper control pressure drop, difference of the static pressure in duct section before and after the damper according to the relevant TPM.
- e) environment protected against weather effects 3K5 according to EN 60721-3-3 mod. A2, without condensation, icing, ice formation and without water from sources other than rain, and
- f) environment without abrasive, adhesive, electrically charged, chemically active and radioactive particles or droplets, without chemically active or radioactive gases. Under no circumstances should exothermic reactions or precipitation of condensate or the excretion of solid coatings or particles occur during normal operation, and corrosion, especially of the copper and brass components of the damper, may not occur. And further
- g) ambient temperature according to the given equipment category, see point k), whereas
- h) in the case of subsequent fitting of the damper with an actuator or other electrical elements, the temperature range is narrowed according to the temperature range of the electrical elements used, and
- i) the duct flange to which the damper flange is mounted must be flat in order to avoid reducing the tightness of the duct and/or the risk of damage to the damper when closing. The damper must be attached to a flange on at least one side. This also applies to when actuator is being set. While
- j) for dampers supplied with a preparation for an actuator, correct adjustment of the limit positions of the actuator is necessary to prevent mechanical damage to the damper, and further
- k) dampers can be used in the relevant zone with an explosion hazard under conditions in accordance with the Ex equipment category specified in this point, when the condition for temperature Ta applies both to the outside of the damper and to the transported air.

Damper design	Actuator manufacturer and type series	Category of equipment	Temperature of use	Allowed uses
Dampers with manual control	(not relevant)	II 2G Ex h IIC T6 Gb	$-20^{\circ} \leq Ta \leq +70^{\circ}$	zones 1 and 2
Dampers with preparation for actuator	(not relevant)	II 2G Ex h IIC T6 Gb	$-20^{\circ} \leq Ta \leq +70^{\circ}$	zones 1 and 2
Dampers with actuator	SCHISCHEK ExMax-...	II 2G Ex IIC T6 Gb	$-20^{\circ} \leq Ta \leq +40^{\circ}$	zones 1 and 2
		II 2G Ex IIC T5 Gb	$-20^{\circ} \leq Ta \leq +50^{\circ}$	
		II 2G Ex IIC T4 Gb	$-20^{\circ} \leq Ta \leq +60^{\circ}$	
	SCHISCHEK RedMax-...	II 3G Ex IIC T6 Gc	$-20^{\circ} \leq Ta \leq +40^{\circ}$	zone 2
		II 3G Ex IIC T5 Gc	$-20^{\circ} \leq Ta \leq +50^{\circ}$	
		II 3G Ex IIC T4 Gc	$-20^{\circ} \leq Ta \leq +60^{\circ}$	



- l) Manually operated dampers may only be operated by hand with a smooth movement.
- m) Dampers for fitting an actuator may only be used with actuators intended to be used in potentially explosive atmospheres of the Ex category corresponding to the Ex category of the damper, and
- n) angular velocity of the actuator must not exceed  $30^{\circ}/s$ , or 5 rpm, which satisfies the condition of the ATEX certificate of 1 m/s maximum relative velocity of the moving parts surfaces, and
- o) the actuator torque shall not exceed the limit shown below.
- p) For dampers with an actuator (assembly manufactured by the manufacturer), the prescribed parameters of the supply voltage and control voltage and voltage and current on the limit switches must be observed, and
- q) the motor speed setting, spring mechanism speed and torque setting may only be changed so that the actuator setting is in accordance with this document and
- r) if the damper is electrically connected directly in areas with a risk of explosion, an Ex terminal block intended for the given zone must be used for the connection, and
- s) connection of intrinsically safe circuits according to EN 60079-25, and
- t) all devices connected to the damper must comply the given Ex category.

## II. DESIGN

The dampers are manufactured in these design variants intended to be used in potentially explosive atmospheres

Damper design variant – control type	Design variant ID code in the damper ordering code	
	For zones 1 and 2	For zone 2
manual (zone 1 and 2)	.02	–
for actuator mounting (zone 1 and 2)	.08	–
with actuator, 3-point control	.70	.80
with actuator, 3-point control, limit switches	.71	.81
with actuator, continuous regulation 0...10 V	.72	.82
with actuator, 3-point control, return spring safety position CLOSED	.73	.83
with actuator, 3-point control, return spring safety position OPEN	.73A	.83A
with actuator, 3-point control, return spring safety position CLOSED, limit switches	.74	.84
with actuator, 3-point control, return spring safety position OPEN, limit switches	.74A	.84A
with actuator, continuous regulation 0...10 V, return spring safety position CLOSED	.75	.85
with actuator, continuous regulation 0...10 V, return spring safety position OPEN	.75A	.85A


### Design .02 - manual

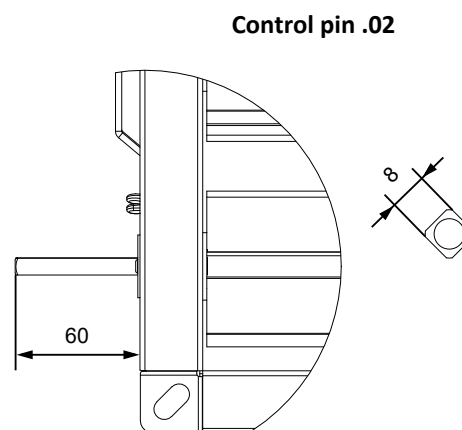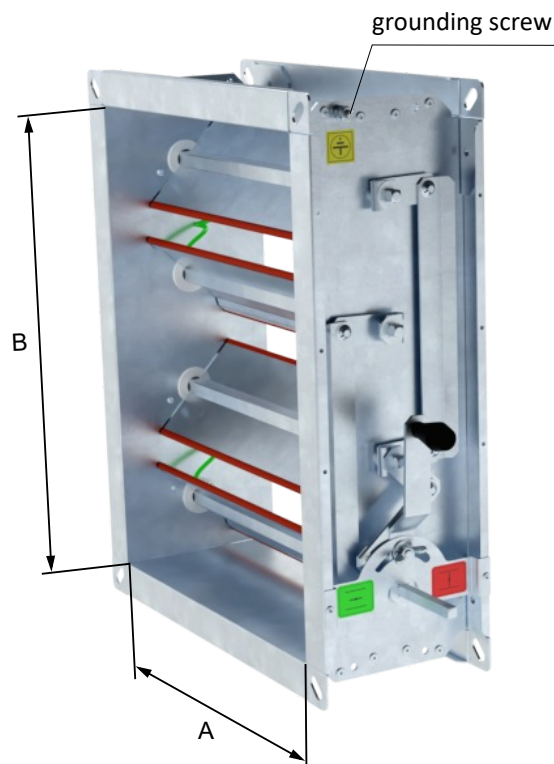


- Each damper blade is connected to the damper body by a brass clip and a copper conductor. These wires are protected against accidental damage by a cover.
- The minimum space for an actuator is 250 mm (in the direction of the blade rotation axis), but some actuators may require more space.

### Design .08 - for fitting an actuator

- In the case of .08 design variant (preparation for an actuator), the size of the control pin for the Ex design variant is different from the ordinary version - the control pin has dimensions of 12 x 12 mm. If necessary, for example, Schischek also offers adapters from 12 x 12 to 16 x 16 size pins.

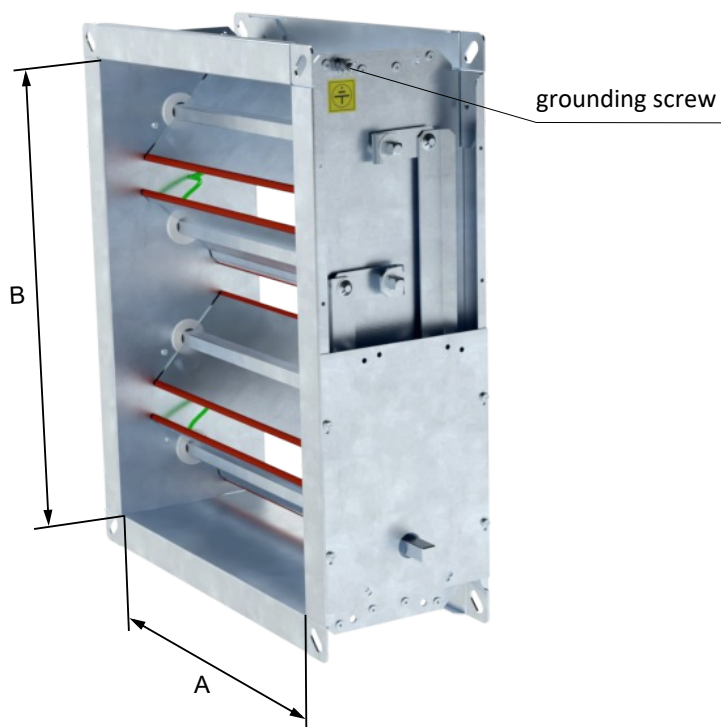


Control pin .08

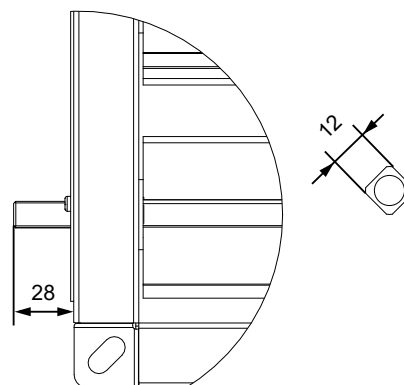


### Design with actuator


- In the case of a damper with a SCHISCHEK actuator size M, an adapter from a 12 x 12 pin to a 16 x 16 mm pin is used.

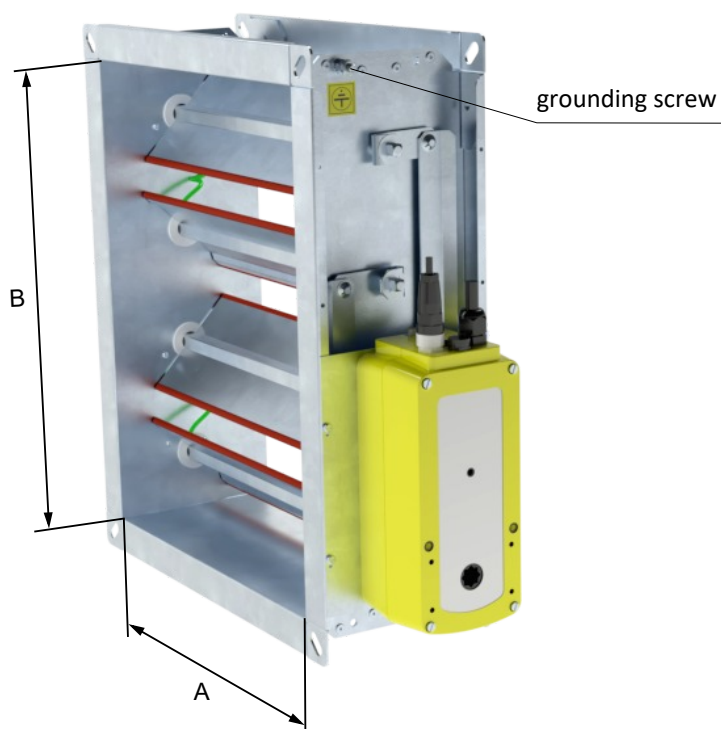

Actuator size [S]

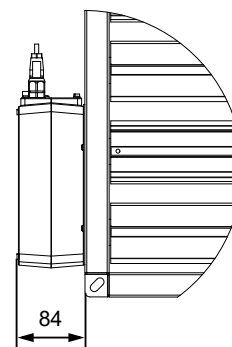

Actuator size [M]

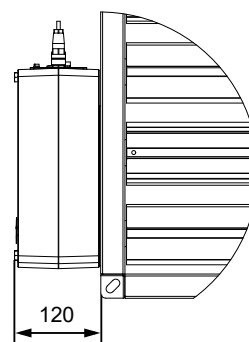

- Each damper blade is connected to the damper body by a brass clip and a copper conductor. These wires are protected against accidental damage by a cover.
- The minimum space for an actuator is 250 mm (in the direction of the blade rotation axis), but some actuators may require more space.

**Grounding wire assembly**

- The Damper is equipped with one grounding screw M6 x 35 mm on the control side.



III. TECHNICAL DATA

Actuator torques

Necessary ... the highest permissible torques of actuators for RKM dampers														
	A [mm]													
B [mm]	200	250	300	315	400	500	630	800	1000	1250	1400	1600	1800	2000
200	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	–	–	–	–	–
250	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	–	–	–	–	–
300	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	–	–	–	–	–
315	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	–	–	–	–	–
400	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	5...10	–	–	–	–
500	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	2x (10...15)	–	–	–
630	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	2x (10...15)	2x (10...15)	2x (10...15)	–
800	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	15...15	20...30	2x (10...15)	2x (10...15)	2x (10...15)	2x (10...15)
1000	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1250	–	–	–	–	–	20...30	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1400	–	–	–	–	–	–	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1600	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1800	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
2000	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)

Necessary ... the highest permissible torques of actuators for RKTМ dampers														
	A [mm]													
B [mm]	200	250	300	315	400	500	630	800	1000	1250	1400	1600	1800	2000
200	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	–	–	–	–	–
250	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	–	–	–	–	–
300	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	–	–	–	–	–
315	10...15	10...15	10...15	10...15	10...15	10...15	10...15	20...30	20...30	–	–	–	–	–
400	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	5...10	–	–	–	–
500	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	2x (10...15)	–	–	–
630	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	2x (10...15)	2x (10...15)	2x (10...15)	–
800	10...15	10...15	10...15	10...15	10...15	10...15	10...15	10...15	15...15	20...30	2x (10...15)	2x (10...15)	2x (10...15)	2x (10...15)
1000	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1250	–	–	–	–	–	20...30	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1400	–	–	–	–	–	–	20...30	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1600	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
1800	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)
2000	–	–	–	–	–	–	–	20...30	20...30	20...30	2x (20...30)	2x (20...30)	2x (20...30)	2x (20...30)



## Assignment and setting of actuators SCHISCHEK ExMax-... and RedMax...

## Types of actuators manufactured by SCHISCHEK

Damper design (assemblies)	Actuator type	Actuator size	Torque	Return spring	Limit switches	Continuous regulation 0...10 V
<b>.70</b>	ExMax-5.10	S	5/10 Nm	no	no	no
	ExMax-15.30	S	15/30 Nm	no	no	no
	ExMax-50.75	M	50/75 Nm	no	no	no
<b>.71</b>	ExMax-5.10-S	S	5/10 Nm	no	yes	no
	ExMax-15.30-S	S	15/30 Nm	no	yes	no
<b>.72</b>	ExMax-5.10-Y	S	5/10 Nm	no	no	yes
	ExMax-15.30-Y	S	15/30 Nm	no	no	yes
	ExMax-50.75-Y	M	50/75 Nm	no	no	yes
<b>.73 .73A</b>	ExMax-5.10-F	S	5/10 Nm	yes	no	no
	ExMax-15-F	S	15 Nm	yes	no	no
	ExMax-30-F	M	30 Nm	yes	no	no
	ExMax-50-F	M	50 Nm	yes	no	no
<b>.74 .74A</b>	ExMax-5.10-SF	S	5/10 Nm	yes	yes	no
	ExMax-15-SF	S	15 Nm	yes	yes	no
	ExMax-30-SF	M	30 Nm	yes	yes	no
	ExMax-50-SF	M	50 Nm	yes	yes	no
<b>.75 .75A</b>	ExMax-5.10-YF	S	5/10 Nm	yes	no	yes
	ExMax-15-YF	S	15 Nm	yes	no	yes
	ExMax-30-YF	M	30 Nm	yes	no	yes
	ExMax-50-YF	M	50 Nm	yes	no	yes
<b>.80</b>	RedMax-5.10	S	5/10 Nm	no	no	no
	RedMax-15.30	S	15/30 Nm	no	no	no
	RedMax-50.75	M	50/75 Nm	no	no	no
<b>.81</b>	RedMax-5.10-S	S	5/10 Nm	no	yes	no
	RedMax-15.30-S	S	15/30 Nm	no	yes	no
<b>.82</b>	RedMax-5.10-Y	S	5/10 Nm	no	no	yes
	RedMax-15.30-Y	S	15/30 Nm	no	no	yes
	RedMax-50.75-Y	M	50/75 Nm	no	no	yes
<b>.83 .83A</b>	RedMax-5.10-F	S	5/10 Nm	yes	no	no
	RedMax-15-F	S	15 Nm	yes	no	no
	RedMax-30-F	M	30 Nm	yes	no	no
	RedMax-50-F	M	50 Nm	yes	no	no
<b>.84 .84A</b>	RedMax-5.10-SF	S	5/10 Nm	yes	yes	no
	RedMax-15-SF	S	15 Nm	yes	yes	no
	RedMax-30-SF	M	30 Nm	yes	yes	no
	RedMax-50-SF	M	50 Nm	yes	yes	no
<b>.85 .85A</b>	RedMax-5.10-YF	S	5/10 Nm	yes	no	yes
	RedMax-15-YF	S	15 Nm	yes	no	yes
	RedMax-30-YF	M	30 Nm	yes	no	yes
	RedMax-50-YF	M	50 Nm	yes	no	yes

Possible types and prescribed settings of actuators for dampers of types RKM and RKTМ equipped with actuators

Designation in the tables below	Allowed actuator types	Allowed torque settings	Forbidden torque settings	Allowed engine speed settings	Forbidden engine speed settings	Allowed spring speed settings (if the actuator is equipped with one)	Forbidden spring speed settings	Allowed switch positions	Forbidden switch positions			
5	ExMax-5.10... [S] RedMax-5.10... [S]	5 Nm	10 Nm	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	01, <b>02</b> , 03, 04	00, 05, 06, 07, 08, 09			
5-10	ExMax-5.10... [S] RedMax-5.10... [S]	<b>5</b> /10 Nm	–	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	01, <b>02</b> , 03, 04, 06, 07, 08, 09	00, 05			
10-15	<b>ExMax-5.10... [S] RedMax-5.10... [S]</b>	10 Nm	5 Nm	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	06, <b>07</b> , 08, 09	00, 01, 02, 03, 04, 05			
	ExMax-15.30... [S] RedMax-15.30... [S]	15 Nm	30 Nm					01, <b>02</b> , 03, 04	00, 05, 06, 07, 08, 09			
	ExMax-15... [S] RedMax-15... [S]		–					01, <b>02</b> , 03, 04, 06, 07, 08, 09	00, 05			
15-30	<b>ExMax-15.30... [S] RedMax-15.30... [S]</b>	<b>15/30</b> Nm	–	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	01, <b>02</b> , 03, 04, 06, 07, 08, 09	00, 05			
	ExMax-15... [S] RedMax-15... [S]	15 Nm										
	ExMax-30-YF [M] RedMax-30-YF [M]	30 Nm		40/ <b>60</b> /90/120/150 s	–	20 s	–					
30	ExMax-15.30... [S] RedMax-15.30... [S]	30 Nm	15 Nm	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	06, <b>07</b> , 08, 09	00, 01, 02, 03, 04, 05			
	ExMax-30-YF [M] RedMax-30-YF [M]		–	40/ <b>60</b> /90/120/150 s	–	20 s	–	00, <b>01</b> , 02, 03, 04, 05, 06, 07, 08, 09	–			
30-50	<b>ExMax-15.30... [S] RedMax-15.30... [S]</b>	30 Nm	15 Nm	15/ <b>30</b> /60/120 s	3 s	10 s	3 s	06, <b>07</b> , 08, 09	00, 01, 02, 03, 04, 05			
	<b>ExMax-30-YF [M] RedMax-30-YF [M]</b>		–	40/ <b>60</b> /90/120/150 s	–	20 s	–	00, <b>01</b> , 02, 03, 04, 06, 07, 08, 09	–			
	ExMax-50.75... [M] RedMax-50.75... [M]	50 Nm	75 Nm	40/ <b>60</b> /90/120/150 s				00, <b>01</b> , 02, 03, 04	05, 06, 07, 08, 09			
	ExMax-50... [M] RedMax-50... [M]		–					00, <b>01</b> , 02, 03, 04, 05, 06, 07, 08, 09	–			

- Blue - default setting
- [S], [M] - actuator size

Assignment of actuators to RKM damper sizes

	A [mm]													
B [mm]	200	250	300	315	400	500	630	800	1000	1250	1400	1600	1800	2000
200	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	–	–	–	–	–
250	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	–	–	–	–	–
300	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	–	–	–	–	–
315	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	–	–	–	–	–
400	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	5-10	–	–	–	–
500	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	2x (10-15)	–	–	–
630	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	2x (10-15)	2x (10-15)	2x (10-15)	–
800	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	30	2x (10-15)	2x (10-15)	2x (10-15)	2x (10-15)
1000	30	30	30	30	30	30	30	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)
1250	–	–	–	–	–	30	30	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)
1400	–	–	–	–	–	–	30	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)
1600	–	–	–	–	–	–	–	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)
1800	–	–	–	–	–	–	–	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)
2000	–	–	–	–	–	–	–	30	30	30	2x (30)	2x (30)	2x (30)	2x (30)

Assignment of actuators to RKTm damper sizes

	A [mm]													
B [mm]	200	250	300	315	400	500	630	800	1000	1250	1400	1600	1800	2000
200	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	–	–	–	–	–
250	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	10-15	–	–	–	–	–
300	10-15	10-15	10-15	10-15	10-15	10-15	10-15	30	30	–	–	–	–	–
315	10-15	10-15	10-15	10-15	10-15	10-15	10-15	30	30	–	–	–	–	–
400	10-15	10-15	10-15	10-15	10-15	10-15	30	30	30	30	–	–	–	–
500	30	30	30	30	30	30	30	30	30	30	2x (30)	–	–	–
630	30	30	30	30	30	30	30	30	30	30	2x (30)	2x (30)	2x (30)	–
800	30	30	30	30	30	30	30	30	30	50	2x (30)	2x (30)	2x (30)	2x (30)
1000	30	30	30	30	30	30	30	50	50	50	2x (30)	2x (50)	2x (70...75)	2x (50)
1250	–	–	–	–	–	50	50	50	50	50	2x (50)	2x (50)	2x (50)	2x (50)
1400	–	–	–	–	–	–	50	50	50	50	2x (50)	2x (50)	2x (50)	2x (50)
1600	–	–	–	–	–	–	–	50	50	50	2x (50)	2x (50)	2x (50)	2x (50)
1800	–	–	–	–	–	–	–	2x (30)	2x (30)	2x (30)	4x (30)	4x (30)	4x (30)	4x (30)
2000	–	–	–	–	–	–	–	2x (30)	2x (30)	2x (30)	4x (30)	4x (30)	4x (30)	4x (30)

## IV. MATERIALS, SURFACE TREATMENT

- The material designs are the same as the regular damper designs, including galvanized / A2 / A4 designs.
- It is not possible to deliver damper with protected by a paint.

In the case of dampers with the actuator, the actuator cover is:

- as standard made of aluminum alloy, painted, or
- in the case of a special customer request
  - made of aluminum alloy painted with seawater-resistant paint with nickel-plated brass cable glands (actuator ...-CTS, or -CTM), or
  - made of AISI 316 stainless steel with nickel-plated brass cable glands (actuator ...-VAS, or ...-VAM).

## V. QUALITY INSPECTION, TESTING BY THE MANUFACTU.

- The dimensions are checked with common measuring devices according to the standard of non-tolerated dimensions used in HVAC.
- Interoperation checks of parts and main dimensions are carried out according to the manufacturing documentation.

The final control includes:

- control of damper opening and closing, and
- checking the electrical connection of each damper blade with the damper body using an electrical detection device.
- The damper assembly with the actuator is connected to voltage, the extreme working positions are defined and the operation of the damper and the function of the limit switches (if included) are tested.

## VI. INSTALLATION, COMMISSIONING, OPERATION, MAINTENANCE, OPERATIONAL CHECKS

### The installation consists of:

- installation of the damper in the air duct
  - grounding and conductive connection with the neighbour duct pieces
  - eventually, installation of the actuator (not part of the damper)
  - or for the electrical connection of the actuator (in the case of a damper with an actuator).
- 
- All effective safety standards and directives must be observed during damper assembly.
  - **The dampers must be earthed with an M6 earthing screw, using a nut and a spring washer** (these parts are included in the delivery of the damper).
  - According to EN 332000-4-41,-4-47 and -5-54, flange connections must be conductively connected during the installation to protect against dangerous contact. For the conductive connection, 2 pcs of spring washers in galvanized design are used, which are placed under the head of one screw and under the screwed-on nut.
  - Before putting the dampers into operation, it is necessary to perform a visual check of the correct installation of the damper and a check of the interconnection of all metal components.

### In the case of subsequent mounting of the damper with an actuator, it is necessary:

- verify that the speed and torque of the actuator are in accordance with this document
- adjust the limit positions of the actuator and
- check that the actuator cannot be released from the holder and that the damper control pin cannot slip.

### In the case of a damper with manual control, it is necessary to check the smooth operation of the damper.

In the case of a damper with a actuator, it is necessary to connect the actuator electrically and test the operation of the damper. **If the electrical connection of the damper is located in an area with a risk of explosion, it is necessary to use an Ex terminal block corresponding to the given zone.** For actuators with return spring **the electrical connection must correspond to the permitted spring closing time.**

During operability checks, it is necessary to check the mutual conductive connection of all metal components, including all damper blades with the damper body (casing) of the damper. The grounding of each individual damper blade needs to be checked using an electrical measuring or detection device:


- during commissioning
- as part of every inspection, maintenance, as well as every possible repair or other intervention on the damper
- at the latest after 1 year from commissioning
- if no blade grounding defect is found after 1 year from commissioning, then periodically at least every 5 years thereafter, otherwise annually.

In order to possibly tighten the screws of the connecting cables of the damper blades, it is permissible to remove and then reattach the wire cover.

## VII. DAMPER IDENTIFICATION


**The dampers are equipped with a durable identification label. It contains the following information:**

- manufacturer's logo
- name and address of the manufacturer
- product type and design variant
- size and weight
- serial number and year of manufacture
- number of the technical specifications
- number of the instructions for use
- Ex device category
- Ex certificate number
- sign Ex.

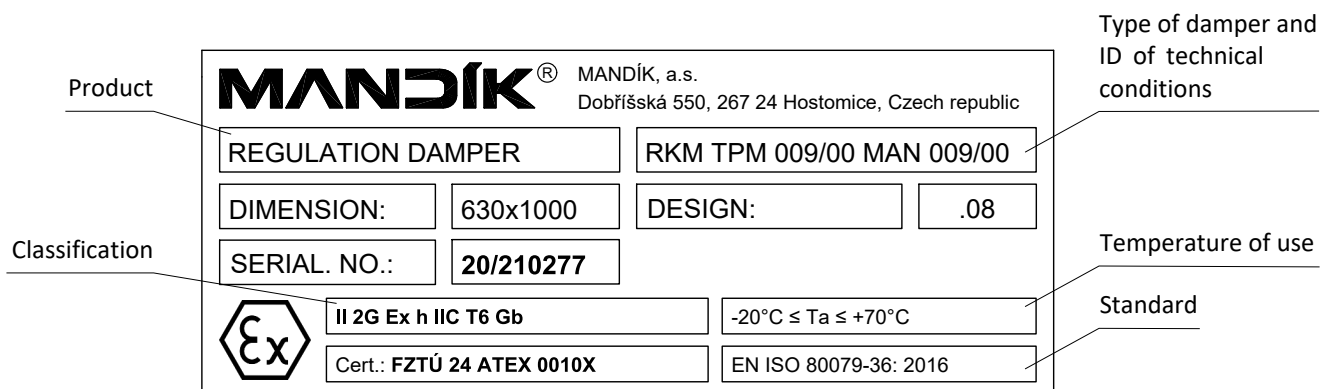

**In the case of a damper equipped with an actuator, the assembly is additionally marked with an assembly label containing:**

- manufacturer's logo
  - statement that it is a damper and actuator assembly
  - type, size and design number of the assembly (the name of the assembly type is identical to the name of the damper type)
  - manufacturer and type of actuator
  - weight of assembly
  - information that changing the actuator settings is only permitted in accordance with MAN 168/24
  - Ex category device (assemblies)
  - sign Ex..
- This assembly label is located near the damper identification label (example)

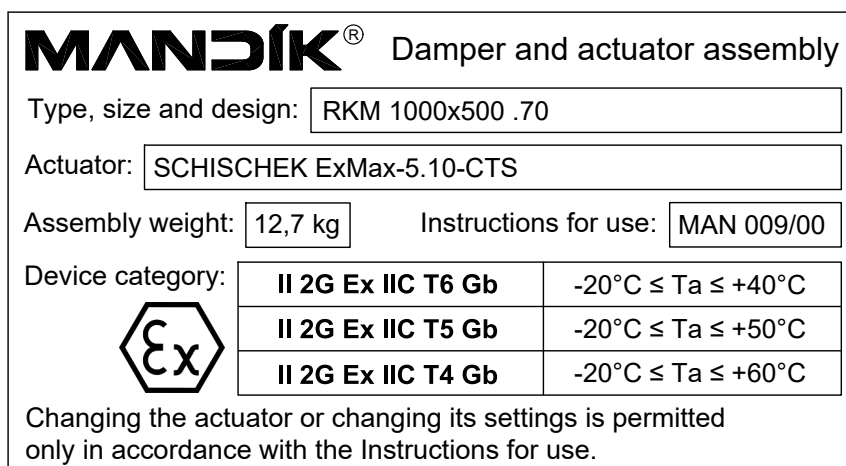

The producer reserves the right for innovations of the product.  
For actual product information see [www.mandik.com](http://www.mandik.com)

**MANDÍK**<sup>®</sup>  
[www.mandik.com](http://www.mandik.com)